


How to use LPL mount with Poco drop-in filter on PYXIS 6K and 12K cameras

Loosen the four Torx screws from the factory mount and carefully remove it.
Exercise caution, as it is still connected via a ribbon connector.



Gently slide out the plastic retaining clip (you may use an orangewood stick or silicone-tipped tweezers for this purpose), then disconnect the ribbon cable.

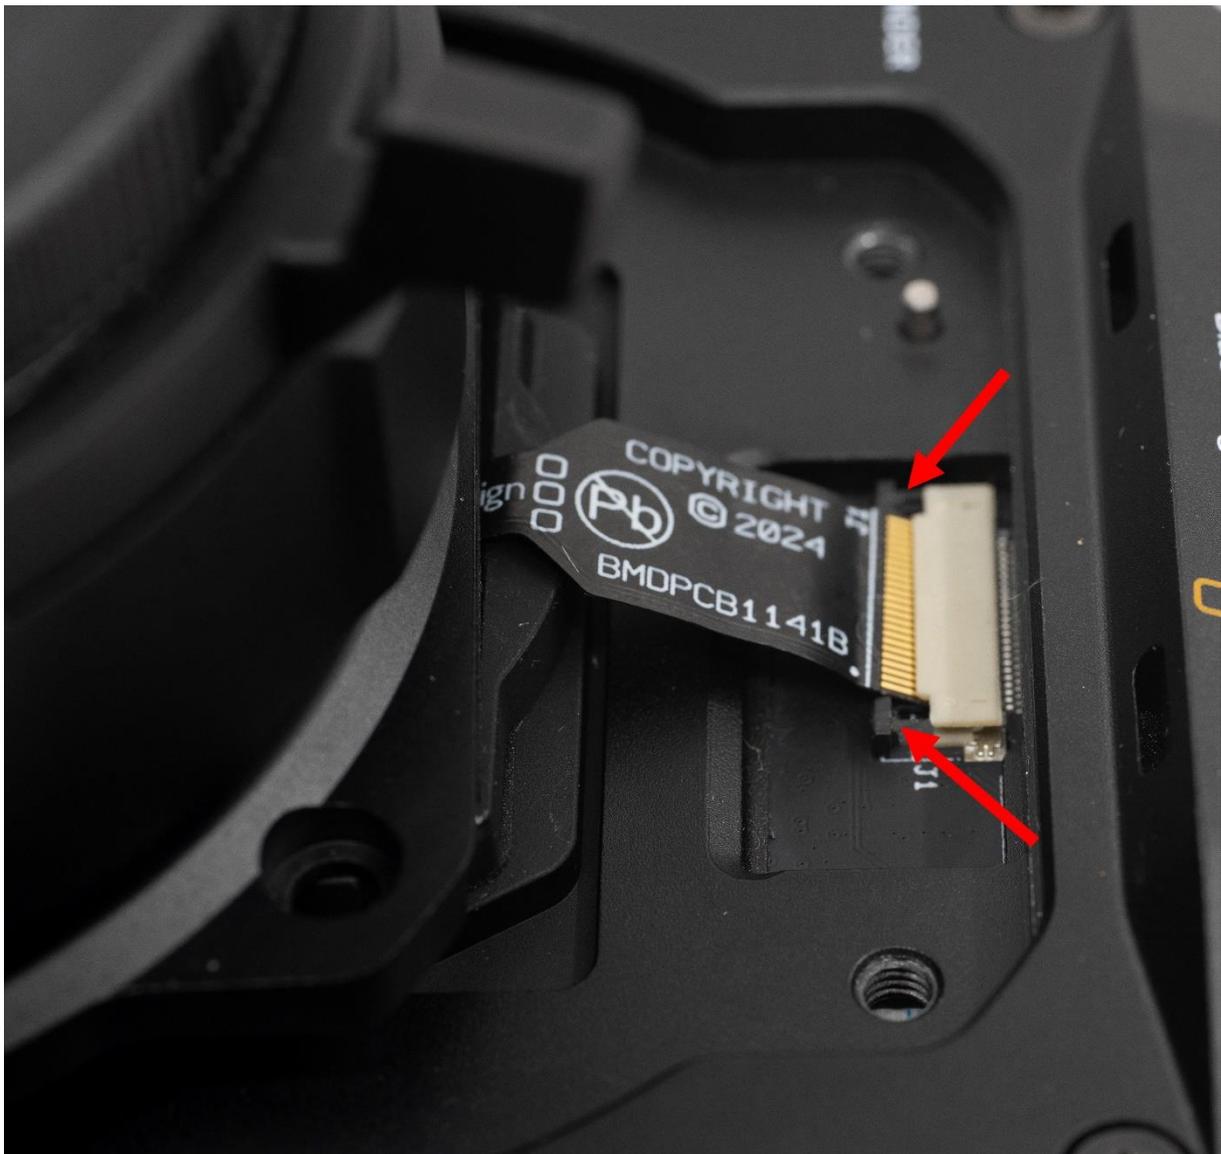

Insert the Poco filter (not included) into the LPL mount and secure it using the screw located at the bottom (a 1.5 mm Allen key is included).
This simple locking mechanism is used to position the filter plane as far inward as possible, while also avoiding infringement of patent rights related to the mechanisms used in Mofage adapters.



Install the LPL mount onto the camera.

Note that it will operate correctly only when a filter is installed.

