



OCT-18 mount adapter – USER MANUAL

- 1) Make sure that the lens scale is set on „infinity” position and the „PIN 1” is located on the right side of the “GROOVE”. Please note that many lenses do not have these “pins” . They are not essential but prevent the lens block unscrewing. The lens mount should be lubricated. You can use a special optical grease or Teflon grease.

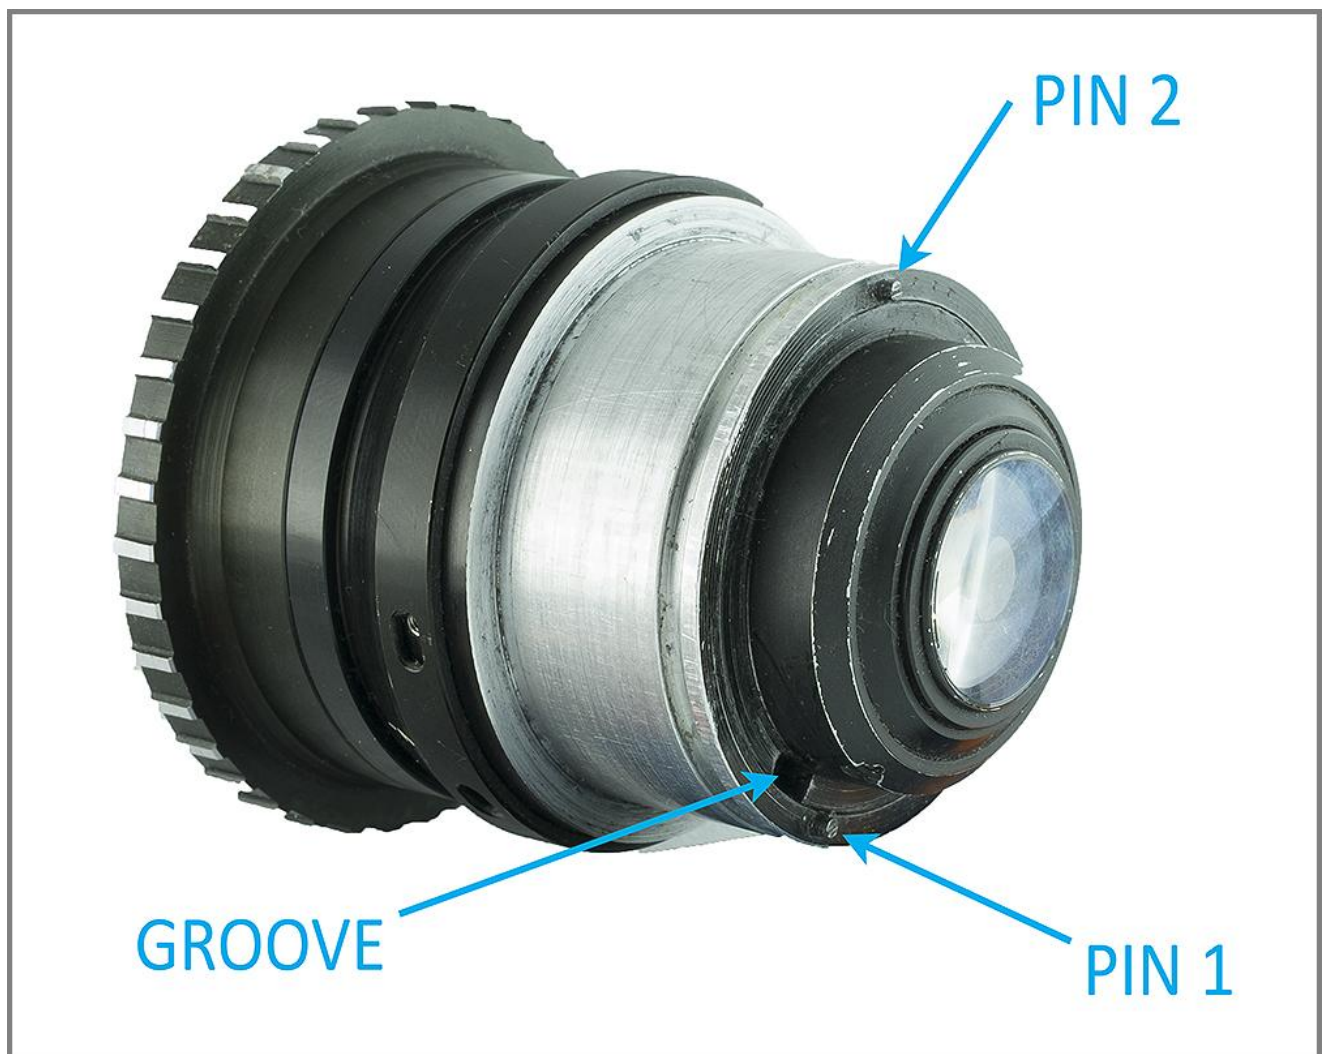

2) Apply the lens onto the adapter. Push the lens inside the adapter (do not use much force) up to resistance. Make sure that the “ADAPTER PIN” is lined up with “GROOVE” and the “SECURE SCREW” is loosen. Then give the lens push. You should hear a “click” sound.

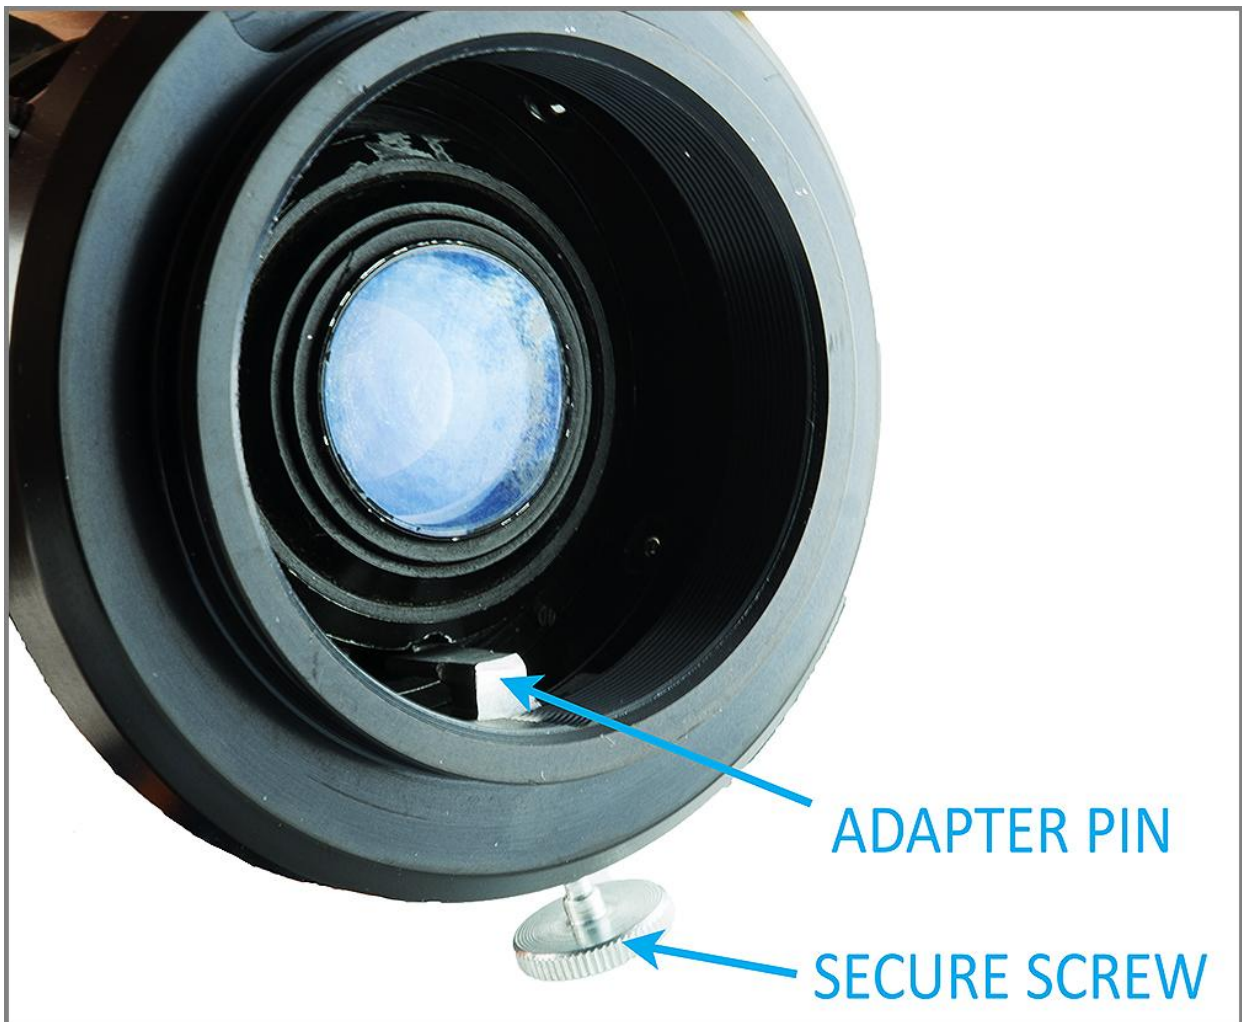

- 3) If you can not fit the lens or the focusing is very hard, it will be necessary to adjust (screw a bit off) four ball point screws. They keep the lens mount in place but allow to rotate the lens flange during focusing.
- 4) Secure the lens by means of “SECURE SCREW”. Screw in and then give one turn to the left. Then it will secure the mount but not lock the lens barrel itself.

